

Choose your P500A

STEP 1 **Select your usage needs**
Everyday use, Intermediate or Intensive.

STEP 2 **Choose a machine type**
Standard 3 Phase or Single Phase.

STEP 3 **Add additional components**
Chemical Pumps and/or Integral Water Softener.

For every day use	Model	Code	Loading
Three phase P500A with WRAS Type 'AB' air gap	P500A12	901V0050	6.68kW
Three phase with integral water softener*	P500AWS12	901V0080	6.68kW
Three phase with added chemical pumps and rinse aid pumps	P500AD12	901V0054	6.68kW
Three phase with added chemical pumps and integral water softener*	P500AWS12	901V0081	6.68kW
Single phase version	P500A30	901V0052	6.68kW
Single phase version with integral water softener*	P500AWS30	901V0084	6.68kW
Single phase version with added chemical pumps	P500AD30	901V0056	6.68kW
Single phase version with added chemical pumps and integral water softener*	P500AWS30	901V0083	6.68kW

For intermediate use	Model	Code	Loading
Intermediate P500A with WRAS 'AB' type air gap	P500A16	902V0050	9.32kW
With integral water softener*	P500AWS16	902V0080	9.32kW
With added chemical pumps	P500AD16	902V0051	9.32kW
With added chemical pumps and integral water softener*	P500AWS16	902V0081	9.32kW

For intensive use	Model	Code	Loading
Intensive P500A with WRAS 'AB' type air gap	P500A22	903V0001	12.68kW
With integral water softener*	P500AWS22	903V0080	12.68kW
With added chemical pumps	P500AD22	903V0002	12.68kW
With added chemical pumps and integral water softener*	P500AWS22	903V0083	12.68kW

*With integral softener (minimum water pressure of 1.5 bar required) Max water temp 55°C